ASRock BIOS Upgrade Instruction

»How to execute ASRock instant flash?

There are 2 methods for updating the BIOS using Instant Flash.

Method 1:

1. Save the BIOS files on a device such as USB disk (FAT32 format), hard disk (FAT32 format) and floppy drive.
2. Press [F2] during POST to get into BIOS setup menu.
3. Select the utility under [Smart] menu to execute it.

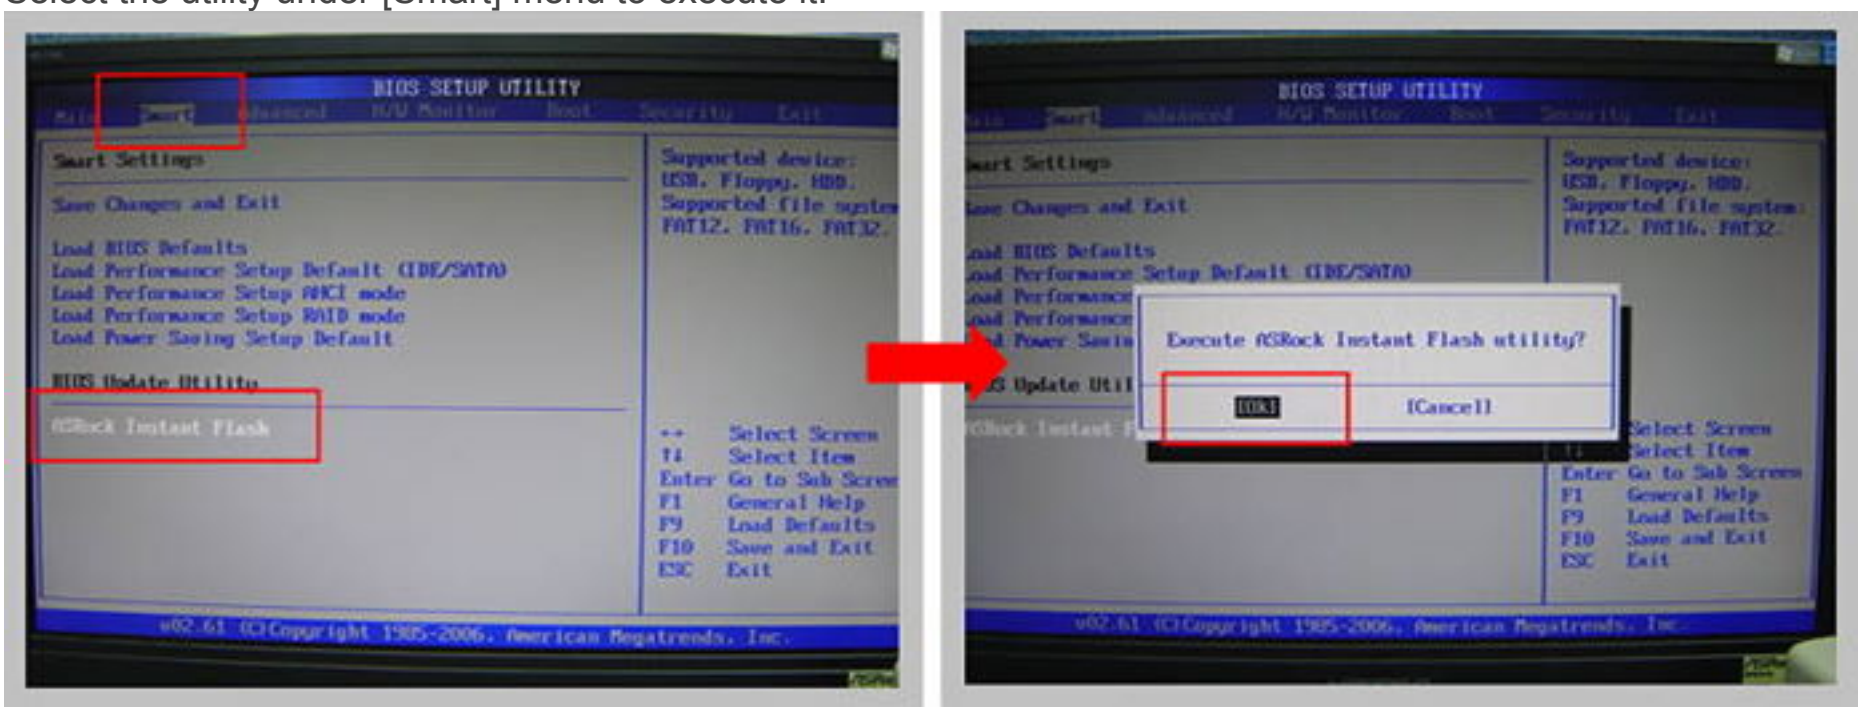

4. ASRock Instant Flash will automatically detect all devices and only list those BIOS versions which are suitable for your motherboard.

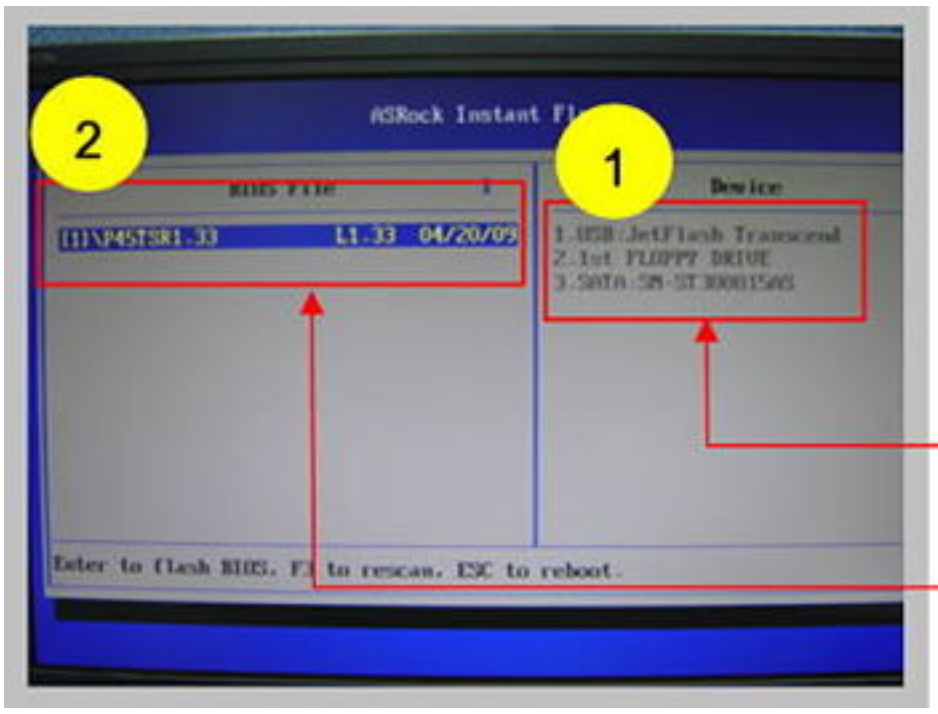

Automatically detect the exact BIOS files from all devices such as USB, hard disk or floppy drive.

Only list BIOS files which apply to your motherboard model.

5. Select the suitable BIOS version and flash.

Method 2:

1. Save the BIOS files on a device such as USB disk (FAT32 format), hard disk (FAT32 format) and floppy drive.
2. Press [F6] when you see this (or similar) page.

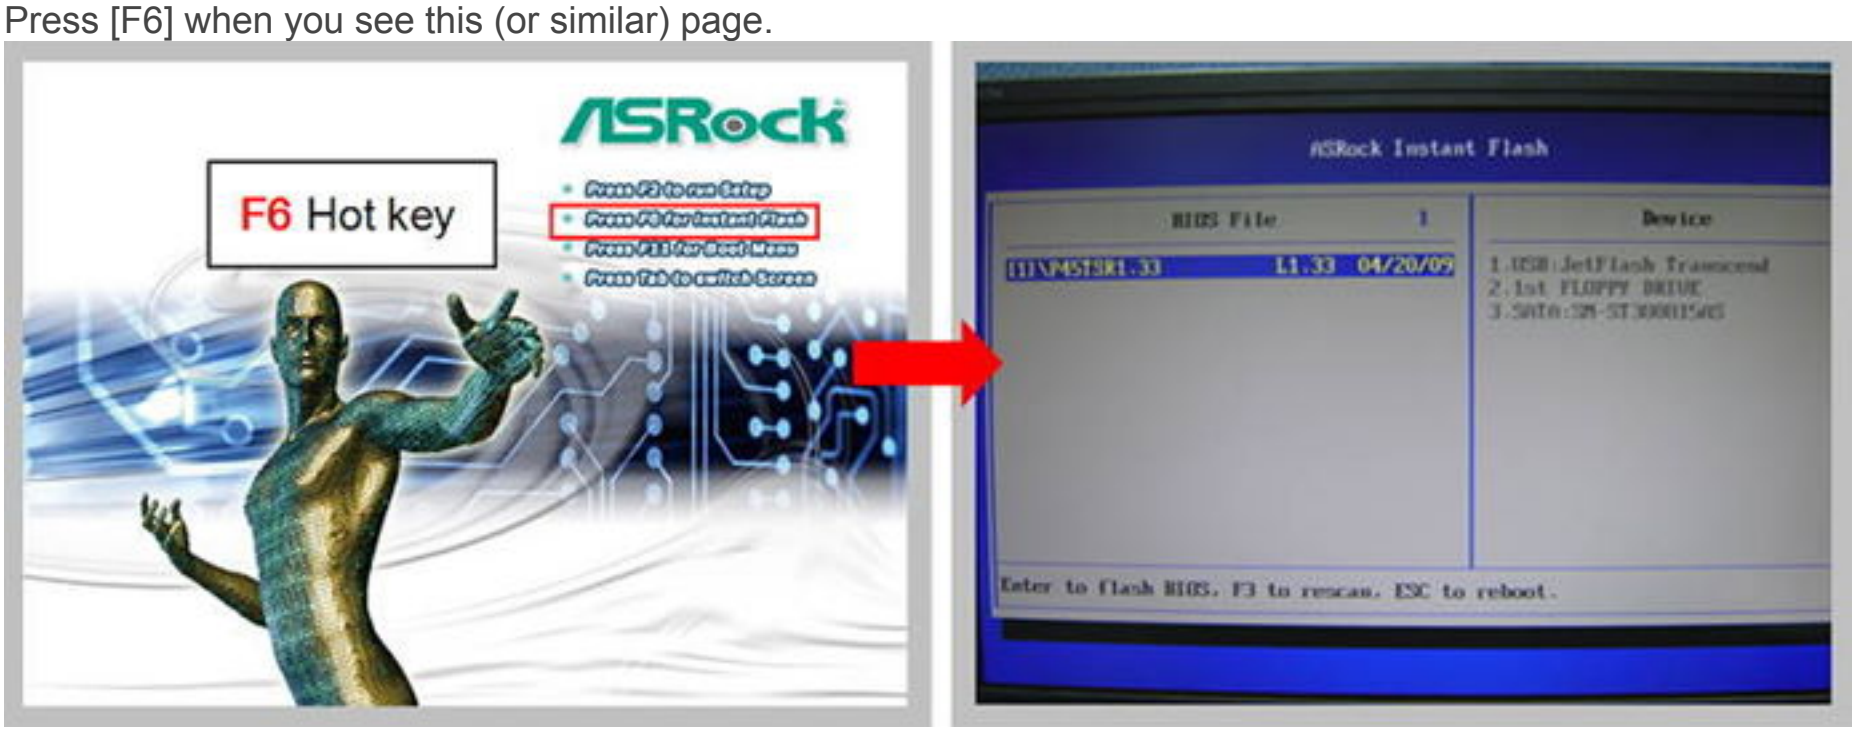

3. Select the suitable BIOS version and flash.

»Notice

If you encounter problems while updating the new BIOS, **DO NOT** turn off your system since this corrupt BIOS might cause your system failed to boot up. Just repeat the process, and if the problem still persists, update the original BIOS file. If the Flash Memory Writer utility was not able to successfully update a complete BIOS file, your system may not be able to boot up. If this happens, your system will need service.

M 3.6 COQUIMBO, CHILE